


## MOVIE TIME POPCORN CART™

---

Item No. CCP-509

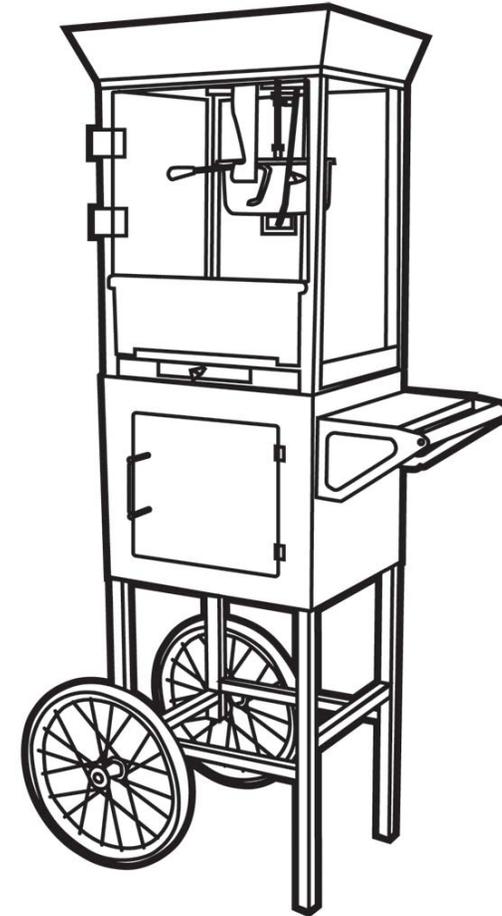

The Helman Group, Ltd  
1621 Beacon Place  
Oxnard, CA 93033

(805) 487-7772 phone  
(805) 487.9975 fax

Visit Us Online at  
[www.helmangroup.com](http://www.helmangroup.com)

©2006 The Helman Group, Ltd.

---

**FOR HOUSEHOLD USE ONLY**  
**READ THESE INSTRUCTIONS BEFORE USING THIS UNIT!**  
**SAVE THESE INSTRUCTIONS!**

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating this appliance.
2. Keep door closed while operating. Do not touch kettle while operating – this gets very HOT.
3. To protect against electrical shock, do not immerse cord, plug or any part of this unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before removing parts or cleaning.
6. DO NOT operate any appliance with a damaged cord or plug, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair, or send back to company as stated in this booklet in the warranty.
7. The appliance manufacturer does not recommend the use of accessory attachments. This may cause injuries.
8. DO NOT use outdoors.
9. Position this unit near outlet to prevent any hazard of injury due to tripping over cord.
11. DO NOT leave kettle motor running once popping has ceased.
12. Extreme caution must be used when moving this appliance.
13. DO NOT use the appliance for other than its intended use.
14. A unit that is plugged into an outlet should not be left unattended while in operation.
15. Check kettle for presence of foreign objects prior to use.
16. Make sure kettle is properly attached to brackets before operating and motor plug is plugged into kettle.
17. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
18. Longer detachable power supply cords can be used if care is exercised in their use.
19. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
20. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.

**SAVE THESE INSTRUCTIONS!**

## IMPORTANT PRECAUTIONS

---

Appliance Specifications:

**120 Volts**  
**60HZ**  
**5.3 Amps**  
**640 W**

## IMPORTANT PRECAUTIONS (Continued)

---

### **Important Precautions to Remember:**

- A. NEVER immerse in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth.
- D. NEVER use a scouring pad on the unit.
- E. NEVER leave unit unattended while in use.
- F. NEVER force kettle in or out of the brackets as this may mis-align gears and will not operate properly.
- G. Unplug unit from outlet when not in use and when cleaning.
- H. DO NOT operate this appliance with a damaged cord or plug, or in the event the appliance ever malfunctions.
- I. DO NOT clean any parts of this unit in dishwasher.
- J. Keep out of reach of children.

## INTRODUCTION

---

Thank you for purchasing The OLD FASHIONED MOVIE TIME POPCORN CART™. This nostalgic looking popcorn cart resembles the late 1800s to early 1900s corner vendor style carts and is a full 60 inches in height.

The OLD FASHIONED MOVIE TIME POPCORN CART™ makes hot, fresh, theater style popcorn every time – anytime!

- Regular theater style popcorn – add butter and salt
- Flavored popcorn – add seasoning from our

#### **Gourmet Popcorn Seasoning Kit :**

- White Cheddar
- Parmesan & Garlic
- Natural Ranch
- Or popped and eaten without any seasonings if you prefer  
*Use your imagination, you know how you like your popcorn best, so however you like it – ENJOY!*

The OLD FASHIONED MOVIE TIME POPCORN CART™ is easy to use, just follow these simple instructions.

#### **After Taking The Unit Out Of The Box**

- A. Your OLD FASHIONED MOVIE TIME POPCORN CART™ needs little assembly. (See assembly instructions sheet).
- B. Before first use, wipe clean the inside of the unit with a non-abrasive moist sponge or a non-abrasive towel or cloth and then wipe with a non-abrasive dry towel.
- C. Wipe clean the inside of the kettle and be sure it is properly placed in the brackets before starting - plug in kettle plug.
- D. Now you are ready to enjoy fresh, hot and tasty theater style popcorn from your OLD FASHIONED MOVIE TIME POPCORN CART™.

**USING YOUR OLD FASHIONED MOVIE TIME POPCORN CART™**

1. First, find a flat surface near an electrical outlet before starting. (Make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.)

Gather your popcorn making supplies; popcorn, seasonings, bowls or bags for holding the popcorn, cooking oil, measuring cup and spoon. (See parts listed separately with assembly instructions).

▪ **HERE'S A TIP:**

**Store all of your popcorn supplies in the handy storage compartment in base of unit, then you will always be prepared and equipped to make hot, fresh theater style popcorn, anytime!**




A



B

2. Plug in your unit in the OFF position.

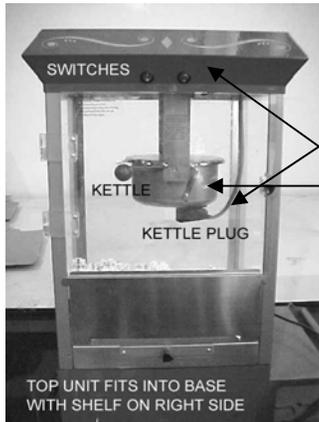

C

3. Make sure top unit is properly seated in base unit.
4. Make sure kettle motor is plugged in.
5. Turn unit ON with switch on crown of machine. Allow the unit to run for 3 – 5 minutes to heat up kettle. Turn unit OFF.
6. By using the (1-Tbs.) oil-measuring spoon supplied with your OLD FASHIONED MOVIE TIME POPCORN CART™, add 2 Tbs. of your favorite popcorn cooking oil to the kettle.
7. Then by using the (½ cup) popcorn-measuring cup supplied, add 1/2 cup popcorn to the kettle.

8. Turn the unit ON, close the door. In no time at all, you can hear the popping begin. Then fresh hot popcorn will begin to burst out of the flip lids on the kettle, just like at the theater!

When popping sounds slow down or stop, turn the unit OFF. Flip the kettle over (see page 4) to empty the kettle. Repeat steps 6 thru 8 until desired amount of popcorn has been popped.

**USING YOUR OLD FASHIONED MOVIE TIME POPCORN CART™ (Continued)**

Tip the kettle with the red knob to remove the pieces of popcorn, once the popcorn has stopped popping.

D

When removing or replacing the kettle, make sure it is properly seated in the kettle brackets.



E

**CLEANING**

Make sure the unit is unplugged before cleaning. Unplug the outer plug to the outlet as well as the kettle motor plug inside the unit. (See photo item 4 on page 3 for location of motor plug)

2. See instructions on Page 5 for kettle cleaning.
  3. Use a slightly damp, non-abrasive sponge or non-abrasive towel to wipe clean the inside and outside of the unit, then wipe with a non-abrasive dry towel to dry.
- NOTE: Never immerse the kettle unit in any liquid – simply wipe clean with a damp cloth. Never place any parts in dishwasher – always wash by hand.
4. Pull out the kernel catching tray and empty. Wipe out with a damp cloth and dry. Replace tray.



F

**CLEANING THE KETTLE BOWL**

1. Switch "OFF" the unit.
2. Pull up the cover and by turning the handle of the bowl anti-clockwise, discard any unpopped popcorn kernels and oil remaining in the kettle.
3. Wipe out the kettle with a disposable clean cloth. The kettle should be clean but "Seasoned" and ready for the next use.

## RETURNS & WARRANTY

---

Should your unit not work or is damaged when you first take it out of the box, please return the unit immediately to the place of purchase. Should you have any other questions about the unit, please contact us at the numbers below between the hours of 8:00 am to 5:00 pm, Monday through Friday, Pacific Standard Time.

Distributed by:

The Helman Group, Ltd.  
1621 Beacon Place  
Oxnard, Ca 93033  
Phone: 805-487-7772  
Fax: 805-487-9975  
info@helmangroup.com  
www.helmangroup.com

OLD FASHIONED MOVIE TIME POPCORN CART™  
Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. To obtain service under this warranty, return this unit to The Helman Group, Ltd. at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.