

OLD FASHIONED HOT DOG ROLLER WITH GRIDDLE TM

Model # HDR-565



FOR HOUSEHOLD USE ONLY

READ THESE INSTRUCTIONS BEFORE
USING THIS UNIT!

SAVE THESE INSTRUCTIONS!

IMPORTANT PRECAUTIONS

Appliance Specifications:

120 Volts
60 Hz
2.33 A
280 Watts

Important Precautions to Remember:

- A. NEVER immerse motor base in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth on the canopy or base unit.
- D. NEVER use a scouring pad on the canopy or base unit.
- E. NEVER leave unit unattended while in use.
- F. NEVER place anything other than what is intended to be cooked on the unit.
- G. Unplug unit from outlet when not in use and when cleaning.
- H. DO NOT operate this appliance with a damaged cord or plug, or in the event the appliance ever malfunctions.
- I. DO NOT place motor base in dishwasher.
- J. Keep out of reach of children.
- K. This appliance is NOT A TOY.
- L. This appliance is not intended for use by young children or infirm persons without supervision.
- M. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

Read all instructions before operating this appliance.

1. Avoid contact with moving parts.
2. Any appliance with a damaged cord or plug, or damaged in any manner, should not be operated. The appliance should be returned or taken to the nearest repair shop for examination or repair, or sent back to the company as stated in this booklet in the warranty.
3. The appliance manufacturer does not recommend the use of accessory attachments other than what is supplied with the unit. These may cause injuries.
4. When any appliance is used by or near children, adult supervision is strongly recommended.
5. Do not use outdoors. FOR HOUSEHOLD USE ONLY.
6. Do not place on or near a hot gas or electric burner, or in a heated oven.

IMPORTANT SAFEGUARDS (Continued)

7. To protect against electrical shock, DO NOT immerse cord, plugs or any part of the motor base in water or other liquids.
8. This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
9. DO NOT leave unit unattended while in use or when plugged in to an outlet.
10. DO NOT HANDLE THE ROLLERS WHEN IN MOTION.
11. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
12. DO NOT insert roller assembly while motor is running. Turn unit OFF first. It is preferable to be unplugged while inserting roller assembly.
13. Unplug from outlet when not in use and before removing parts for cleaning.
14. To reduce the risk resulting from becoming entangled or tripping over a long cord, a short power supply cord is provided.
15. ROLLER ASSEMBLY MUST BE INSERTED CORRECTLY IN ORDER TO ROTATE ROLLERS.
16. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance. Electrical extension cords can be used if care is exercised in their use.
17. Keep hands and foreign objects out of roller assembly while operating. Check to insure proper rotation of rollers for even cooking.

INTRODUCTION AND FEATURES

Your family and friends will enjoy the fun of The OLD FASHIONED HOT DOG ROLLER WITH GRIDDLE™. Please take care of your machine by following these simple instructions and precautions.

You can use a variety food items with your OLD FASHIONED HOT DOG ROLLER WITH GRIDDLE™. To enjoy a fun, easy to serve meal, we suggest you try grilling the following:

- A variety of regular length Hot Dogs and Wieners (Beef, Turkey, Kosher, or Chicken).
- Extra length Hot Dogs such as the foot long Farmer John® Dodger Dogs™
- Sausages Links or Patties, Hamburger Patties, Bacon, or Ham Slices

The canopy top opens and can store hot dog buns, different breads, or hot dogs until ready to use. The OLD FASHIONED HOT DOG ROLLER WITH GRIDDLE™ creates a fun display while cooking up some of your favorite foods. It is great for the den while watching sporting events, or in a dorm room studying with friends. You can even set it up at the office for lunches or meetings. Kids love it because they can serve themselves! Just open a package of hot dogs, place on the rotating roller assembly, and the machine does the rest! What could be easier? Suitable occasions for use include:

- **Birthdays, Graduation Parties and Special Events**
- **Business Gatherings**
- **Holidays**
- **Casual get-togethers with friends and family**

And more...


SET UP INSTRUCTIONS

Your OLD FASHIONED HOT DOG ROLLER WITH GRIDDLE™ requires little assembly.

- Fit the four canopy poles into the holes in each corner of the unit. Insert the drip tray in the slot at the back of the unit.
- Place roller assembly in unit, making sure the pin fits correctly into the fitting on the left hand side of the base interior. **IMPORTANT:** Notice the shape of the receptacle in the base and the endpin on the roller assembly (see Illustration A below). They are fitted to work together. **DO NOT** force the pin into the receptacle or it will strip and then cannot control the roller action (see Illustration B below).

Do not attempt to place roller assembly on base or remove from base while motor is on.

- Replace the hot dog rollers with the bonus non-stick griddle, for alternate cooking methods (see illustration C, below).
- Attach the canopy top to the poles.

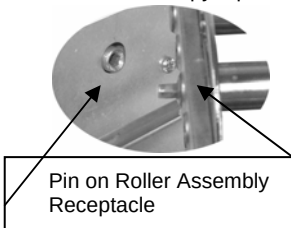

A

B

C

USING YOUR OLD FASHIONED HOT DOG ROLLER

First, find a stable surface near an electrical outlet before starting. Roller Assembly must be engaged correctly to operate properly. Always make sure your cord is away from any water source. If needed, it is acceptable to use an extension cord.

INSTRUCTIONS:

1. The dial on the right of The OLD FASHIONED HOT DOG ROLLER WITH GRIDDLE™ turns on the power. Turn to the ON position. The red power indicator light should come on. The dial on the left regulates the heating temperature, from LOW to HIGH. Turn on HIGH. Let the unit warm up for 3 minutes or so, and place the hot dogs on the rollers (evenly spaced). Up to 8 regular sized hot dogs or 12 breakfast sausage links can be cooked at one time.
2. You will see the hot dogs begin to turn. They will continue to turn at approximately two cycles per minute. You will notice the color begin to darken as they are cooking. The hot dogs should be cooked for 15 to 20 minutes (depending on the type and size of the hot dogs). The thicker the hot dog, the longer it will take to cook through.
3. To cook hamburgers, chicken, sausage patties or bacon, just replace the hot dog rollers with the bonus non-stick griddle. (Cooking time will depend on the type and thickness of meat.)
4. After they have cooked, turn the heater knob down to a medium heat to keep the hot dogs warm and still rotating. As hot dogs are taken off, they can be replaced with new hot dogs to cook (adjust temperature) if need be.
5. By following these simple instructions, your OLD FASHIONED HOT DOG ROLLER WITH GRIDDLE will be fun for friends, family, and kids of all ages!

CLEANING


- Make sure the unit is unplugged before cleaning. Allow all parts to COOL to the touch, especially the roller assembly, griddle, and drip tray.
- Before first use and continuing after each use, be sure to wipe off the roller assembly with a damp cloth and dry thoroughly. When more concentrated cleaning is necessary, wash in warm soapy water, rinse, and dry thoroughly.
To prolong the life of your HOT DOG ROLLER, hand-washing parts of parts is advised. Dishwasher use is not recommended.

NOTE: To prolong the life of your OLD FASHIONED HOT DOG ROLLER WITH GRIDDLE™, be sure to follow the cleaning instructions after every use and confirm that the roller assembly is fitted properly in the base unit. DO NOT force it, or it will strip the fitting and the rollers will not be able to be controlled for proper rotating. Never use anything abrasive on the base in order to maintain the original finish.

TROUBLESHOOTING

Power Light does not turn ON.	Check electrical plug to insure it is fully plugged in.
Rollers are not turning.	Make sure Power Light is On and the unit is properly plugged in. Turn unit off and on again. Make sure the end roller pin is correctly engaged in the motor base receptacle.
Uneven heating.	Switching the hot dogs from one side to the other is helpful if this occurs.
Hot dogs are not rotating on the rollers.	Due to packaging of hot dogs, sometimes the hot dogs are square in shape. Adjust the hot dogs manually on the rollers, until they begin to plump from cooking. They will eventually even out in shape and automatically rotate on the rollers.

BREAKDOWN

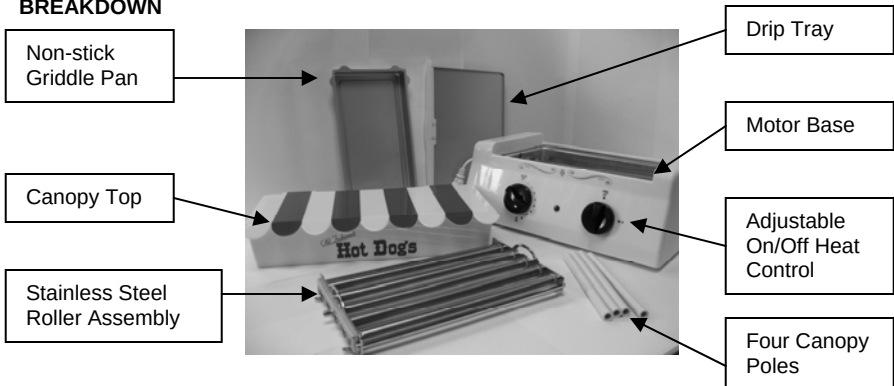

RETURNS & WARRANTY

Should your unit not work or is damaged when you first take it out of the box, please return the unit immediately to the place of purchase. Should you have any other questions about the unit, please contact us at the numbers below between the hours of 8:00 am to 5:00 pm, Monday through Friday, Pacific Standard Time.

Distributed by:

The Helman Group, Ltd.
1621 Beacon Place
Oxnard, Ca 93033
Phone: 805-487-7772
Fax: 805-487-9975
Info@helmangroup.com
www.helmangroup.com

THE OLD FASHIONED HOT DOG ROLLER AND GRIDDLE™

Model # HDR-565

Limited Warranty

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributors' discretion. To obtain service under this warranty, return this unit to The Helman Group, Ltd. at the address above, shipping prepaid. You must also include a copy of the original receipt along with your name, address and phone number. Include a description of the defect along with the date you purchased the product.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.



The Helman Group, Ltd
1621 Beacon Place
Oxnard, CA 93033

(805) 487-7772 phone
(805) 487-9975 fax

Visit Us Online at
www.helmangroup.com

©2006 The Helman Group, Ltd.