




INSTRUCTION MANUAL
FREESTANDING WINE COOLER MODEL:




KWR28D-2SR



 
KWR43D-2SR

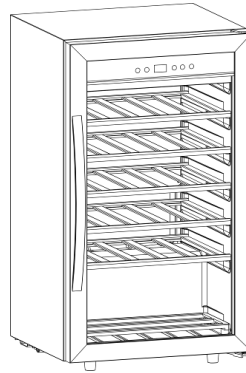


KWR33S-1SR

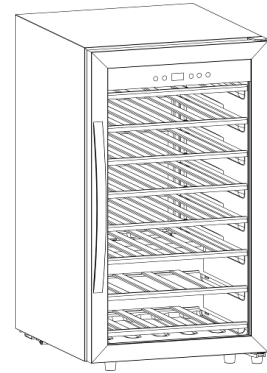 


KWR50S-1SR

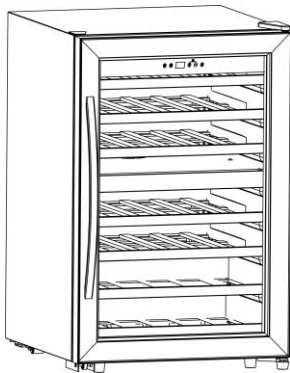 

KWR47D-2SR

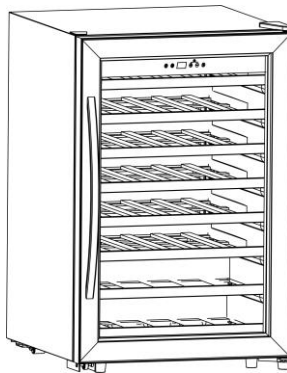 

KWR55S-1SR

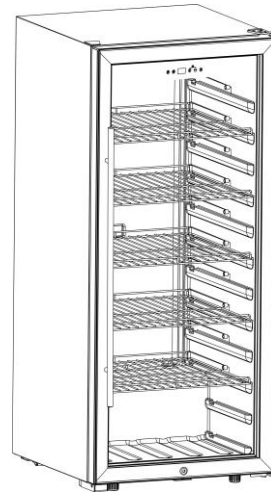 

KWR102S-1BGR

BEFORE USE, PLEASE READ AND FOLLOW ALL SAFETY RULES AND OPERATING INSTRUCTIONS.

Allavino has a policy of continuous improvement on its products and reserves the right to change materials and specifications without notice

ALLAVINO


8520 Miralani Dr., San Diego, CA 92126

Table of Contents

| | |
|---------------------------------|-----|
| Diagram and Description | 3-5 |
| Safety Tips | 6 |
| Installation Instructions | 7 |
| Handle Installation | 7 |
| Operation Instructions | 8 |
| Setting Temperature | 9 |
| Racking Configuration | 10 |
| Care and Maintenance | 12 |
| Troubleshooting | 13 |
| Service Information | 13 |



Diagram and Description

 Control panel of dual zone model **KWR28D-2SR** and **KWR43D-2SR**

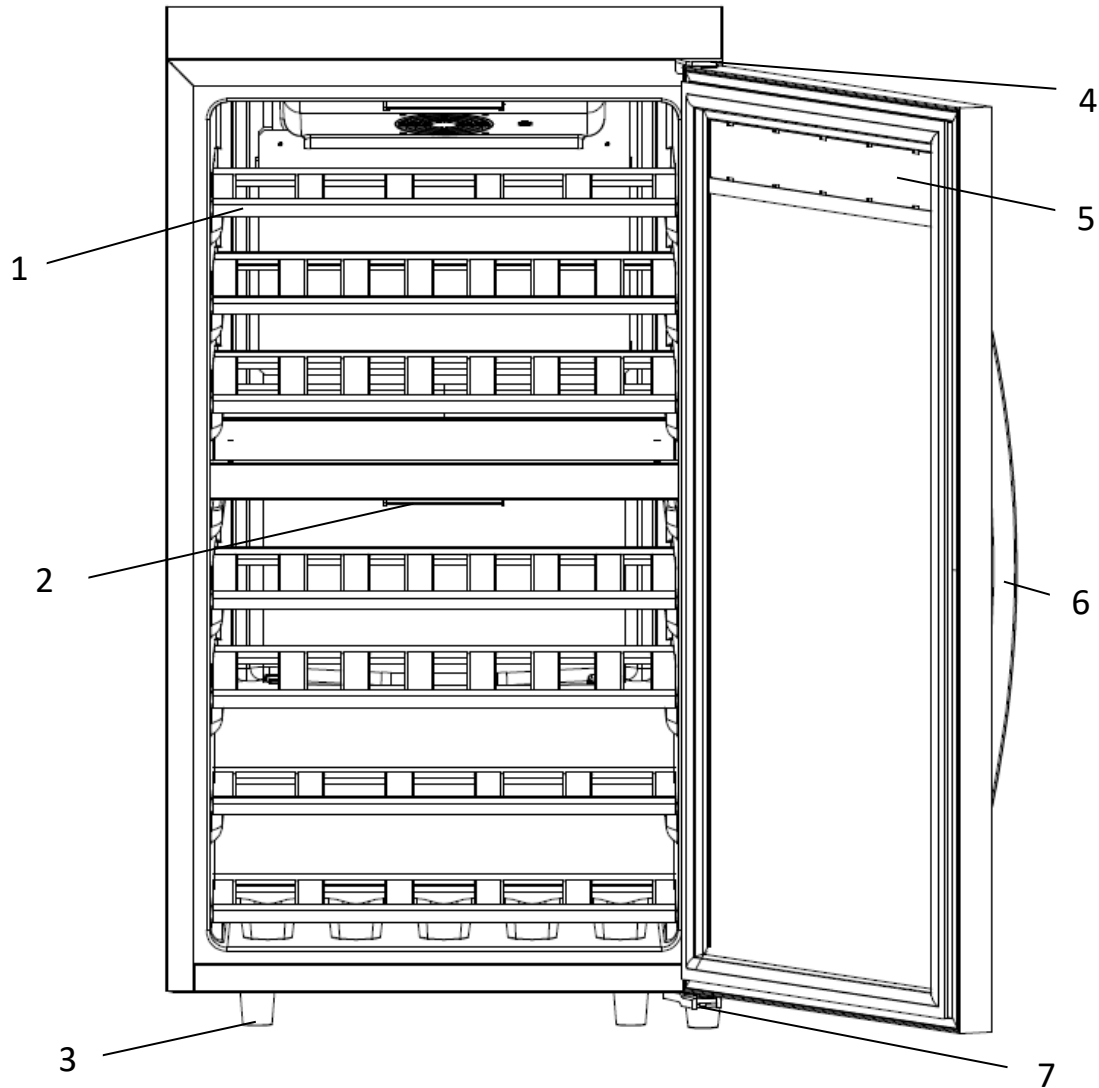


1. Wood Shelves
2. LED top light
3. Adjustable Feet
4. Door Hinge
5. Control panel
6. Door Handle
7. Lower hinge

  Control panel of single zone model **KWR33S-1SR**, **KWR50S-1SR** and **KWR102S-1BGR**

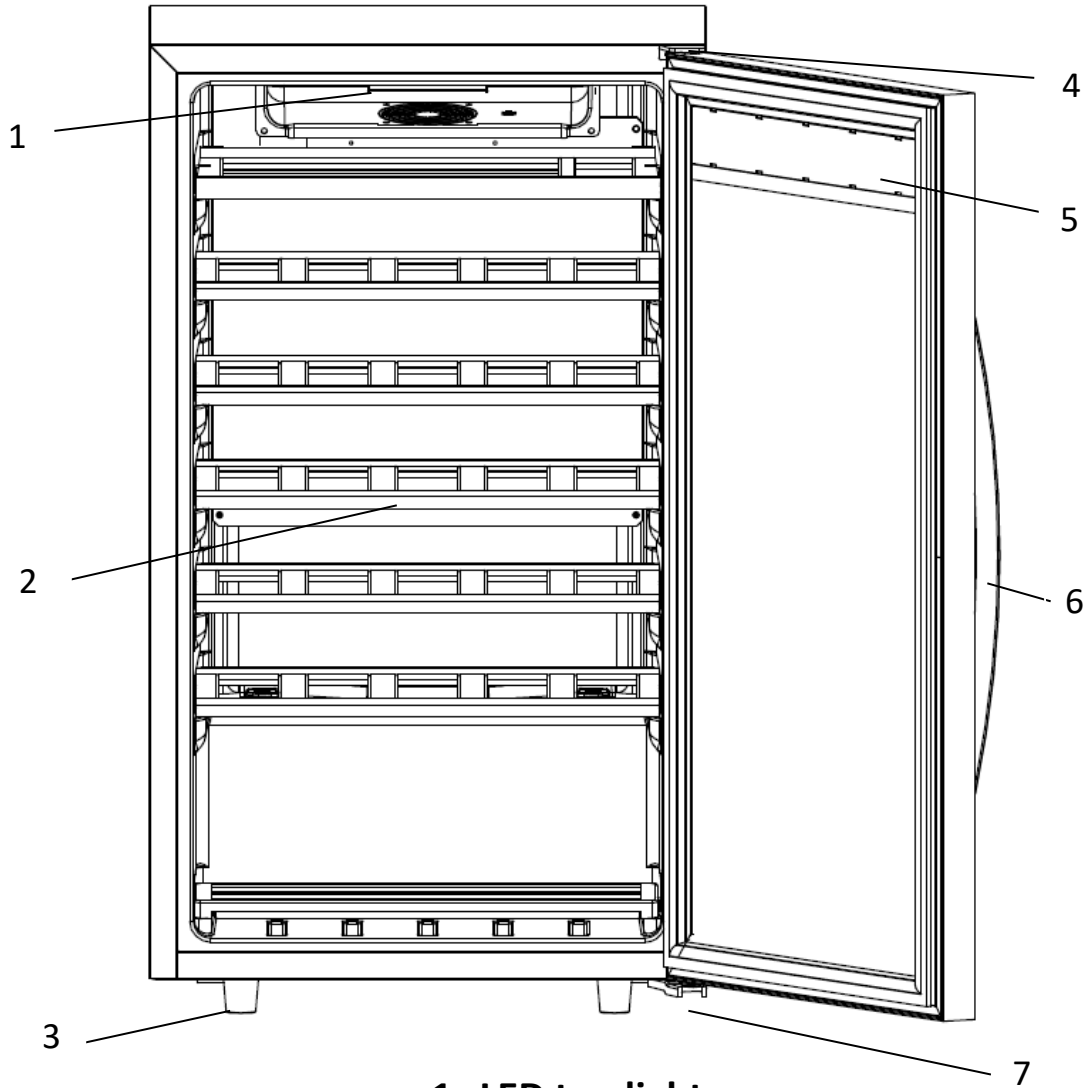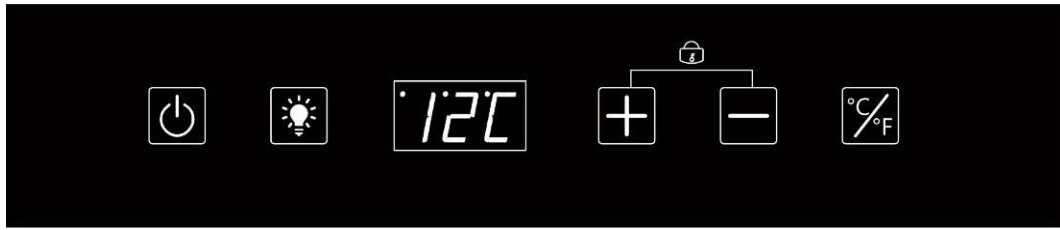

 - 1. LED top light**
- 2. Wood shelves**
- 3. Adjustable Feet**
- 4. Upper door Hinge**
- 5. Control panel**
- 6. Door Handle**
- 7. Lower hinge**

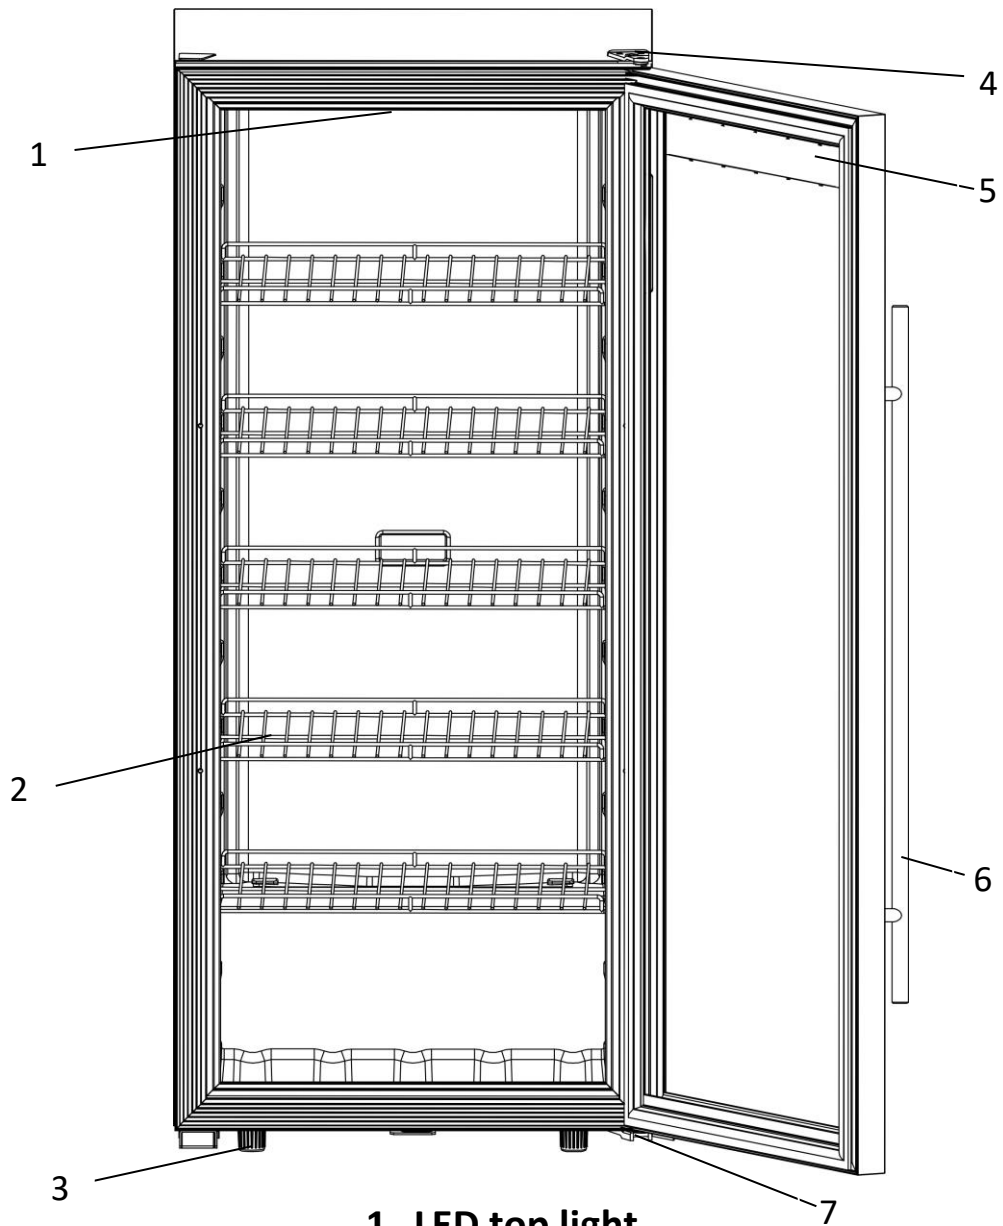

- 1. LED top light**
- 2. Wire shelves**
- 3. Adjustable Feet**
- 4. Upper door Hinge**
- 5. Control panel**
- 6. Door Handle**
- 7. Lower hinge**

Safety Tips

Before using this appliance, it must be properly positioned and installed as described in this manual, so please read carefully. To reduce the risk of fire, electrical shock or injury when using the appliance, follow these basic precautions.

DANGER

- Plug into a grounded 3-prong outlet. Do not under any circumstances cut or remove the third ground prong from the power cord supplied, do not use an adapter, and do not use an extension cord.
- It is recommended that a separate circuit, serving only your appliance be used. Do not use outlets that can be turned off by a switch or pull chain.
- Never clean appliance parts with flammable fluids and do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Unplug the appliance or disconnect power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.

WARNING

- Use two or more people to move and install appliance. Failure to do so can result in back or other injury.
- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 60°F (16°C) and below 90°F (32°C). This unit must be installed in an area protected from the element, such as wind, rain, water spray or drips.
- The appliance should not be located next to ovens, grills or other high heat sources or in areas of extreme cold.
- The appliance must be installed in accordance with state and local codes. A standard electrical supply (115 V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local ordinances is required.
- Do not kink or pinch the power supply cord of appliance.
- The fuse (or circuit breaker) size should be 15 amperes.
- It is important for the appliance to be leveled in order to work properly. You may need to make several adjustments to level it.
- Never allow children to operate, play with or crawl inside the appliance. Child entrapment and suffocation are not just problems of the past, junked or abandoned appliances are still dangerous. When no longer using your old wine cellar, take off the door and leave the shelves in place so that children may not climb inside easily.
- Do not use solvent-based cleansers or abrasives on the interior as they may damage or discolor the interior.
- Because of potential safety hazards under certain conditions, it is strongly recommended that you do not use an extension cord with this appliance. However, if you must use an extension cord, it is absolutely necessary that it be a UL/CUL-Listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 115 volts and at least 10 amperes.
- If the appliance is going to be used in an area that is prone to power surges/outages, it is suggested that you use a power surge protector. The surge protector that you select must have a surge block high enough to protect the appliance it is connected to. Damages due to power surges are not considered a manufacturer covered defect and will void your product warranty.
- The cord should be secured behind the appliance and not left exposed or dangling to prevent accidental injury. Never unplug the appliance by pulling the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord with cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.
- Do not use this apparatus for other than its intended purpose.
- **California Proposition 65 Warning:** This product contains a chemical or chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Failure to heed these safety warnings may result in extensive product damage, serious personal injury, or death.

Installation Instructions

BEFORE USE:

 
- Remove the exterior and interior packaging.
- Before connecting the unit to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Install handles.
- This appliance is designed for free standing or built-in (fully recessed) installation.
- Place the unit on a flat, solid floor that is strong enough to support it when it is fully loaded. To level the appliance, adjust the front leveling leg at the bottom of the unit.
- When moving your wine cellar, please do not incline it more than 45 degrees.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption.
- The wine cellar should be placed in an area where the ambient temperature is less than 90 degrees Fahrenheit and higher than the lowest temperature you want to store your wine at. If the ambient temperature is lower than the set temperature, the internal temperature will match the ambient temperature.
- Avoid locating the unit in damp areas.
- Plug the wine cellar into an exclusive, properly installed and grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or electrical grounding should be directed to a certified electrician or authorized products service center.
- After plugging the appliance into a wall outlet, allow the unit to cool down for 3 to 4 hours before placing wine bottles in the appliance.

Handle Installation

Step 1: Remove the box containing the handle and screws from the wine cellar.

Step 2: Pull out a bit of the rubber gasket from the back side of the holes.

Step 3: Insert the screws through the holes and connect with the handle.

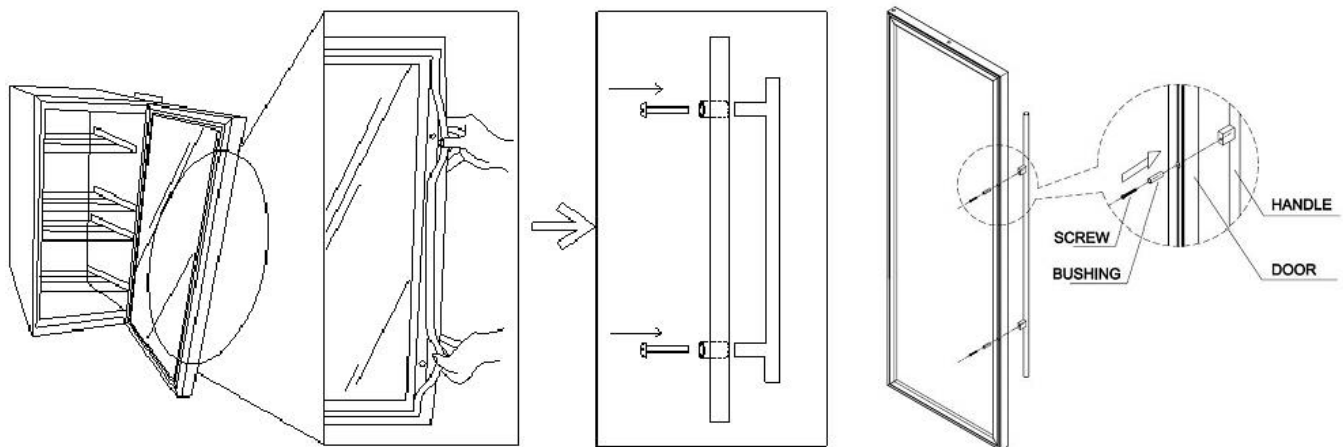


Operation Instructions

The wine cellar should be placed in an area where the ambient temperature is 32 degrees Fahrenheit. If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause the interior temperatures to fluctuate.

Your Allavino Wine Cellar includes an operating panel on the door of each zone. The operating panel includes several features to operate and control the temperature of the wine refrigerator, including:

 For single zone model KWR33S-1SR, KWR50S-1SR, KWR55S-1SR and KWR102S-1BGR

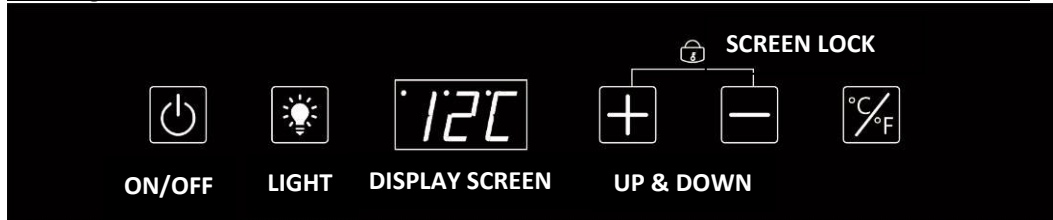

ON/OFF - Turns the unit on or off

LIGHT - Turns the interior light on or off

 
DISPLAY SCREEN – Displays the desired temperature on the LED display, also indicates whether the displayed temperature is in Celsius and Fahrenheit

UP/DOWN BUTTONS – Increases or decreases the temperature in 1 degree

°C / °F – Toggles the displayed temperature between Celsius and Fahrenheit

SCREEN LOCK – Lock all the control buttons automatically after you finish setting, you can press + and – button at the same time to cancel the screen lock function when you want to set the wine refrigerator.

For dual zone model KWR28D-2SR, KWR43D-2SR and KWR47D-2SR

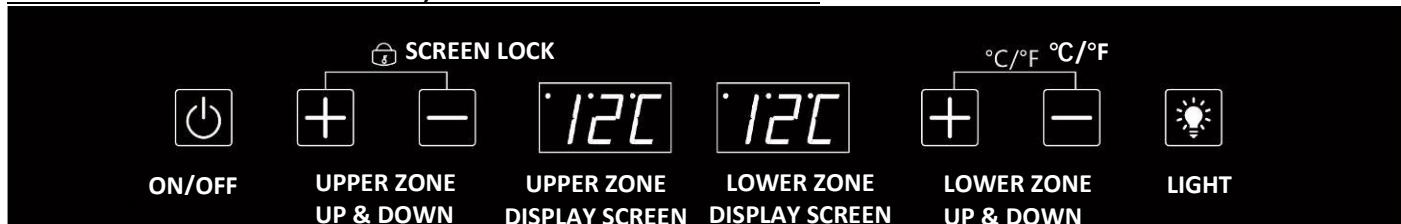

ON/OFF - Turns the unit on or off

UP/DOWN BUTTONS – Increases or decreases the temperature in 1 degree

DISPLAY SCREEN – Displays the desired temperature on the LED display, also indicates whether the displayed temperature is in Celsius and Fahrenheit

°C / °F – Toggles the displayed temperature between Celsius and Fahrenheit, to press **LOWER ZONE UP “+”** and **DOWN “-”** buttons at the same time for 3 seconds

SCREEN LOCK – Lock all the control buttons automatically after you finish setting, you can press **UPPER ZONE UP “+”** and **DOWN “-”** buttons at the same time to cancel the screen lock function when you want to set the wine refrigerator.

LIGHT - Turns the interior light on or off

If you are going on vacation, you may leave the wine cellar operating during vacations of less than three weeks. If the appliance will not be used for several months, you should remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent mold growth, leave the door open slightly, blocking it open if necessary.

Setting Temperature

This Allavino Wine Cellar has a wide enough temperature range to store red, white, or sparkling wine, depending on your preference. Different varieties of wine require different temperature settings. Red wine is generally stored between 50 and 65 degrees Fahrenheit, while white wines are stored between 40 and 50 degrees Fahrenheit. White wine can be stored at red wine temperatures for a short period of time (less than three months), and flash chilled before serving.

You can set the temperature as you desire by touching the UP or DOWN button. When you touch the buttons for the first time, the LED readout will show the setting temperature. Each push of the button will adjust the temperature by one degree in the desired direction. Please be aware that the desired temperatures may fluctuate depending on whether the interior light is ON or OFF and depending on the orientation of the bottles.

 
PLEASE NOTE:

- In the event of a power interruption, all previous temperature settings will be automatically saved and each compartment will return to the previous temperature setting.
- If the unit is unplugged, loses power, or is turned off, you must wait 3 to 5 minutes before restarting. Attempting to restart the wine cellar before this time has elapsed may prevent it from starting.
- When you use the wine cellar for the first time or restart the wine cellar after having been shut off for a long time, there will be a few degrees variance between the temperature you select and the one indicated on the LED readout for the first few hours of operation. After a few hours of operation, the temperature will normalize to the displayed temperature.


Racking Configuration

Disperse your bottles evenly throughout the unit so as not to concentrate weight in any one area. This also helps to provide an even temperature range throughout the unit. Make sure that bottles are not all grouped together either at the top or bottom of the cabinet. Never try to pull out more than one sliding shelf at a time as it can cause the appliance to tip forward.


The Allavino Freestanding Wine Cellar has 3 different kinds of shelf in a unit:

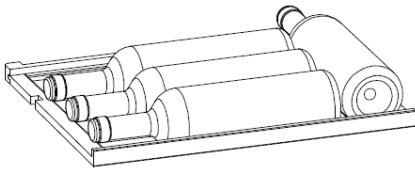

Top shelf: hold 4 bottles

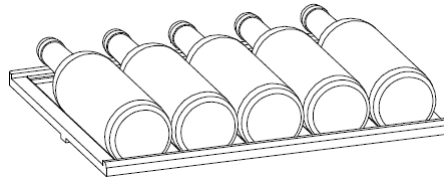 


Regular shelf: hold 5 bottles

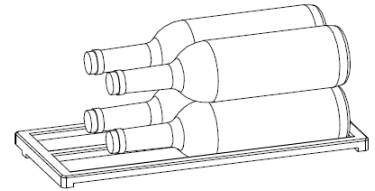 


Bottom shelf: hold 4 bottles

 
Bottle capacity

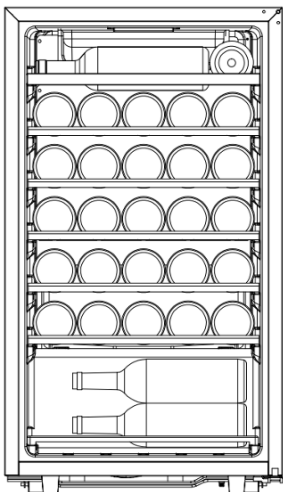


KWR28D-2SR
28 bottles

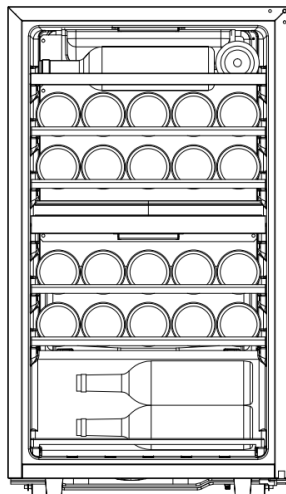 


KWR33S-1SR
33 bottles

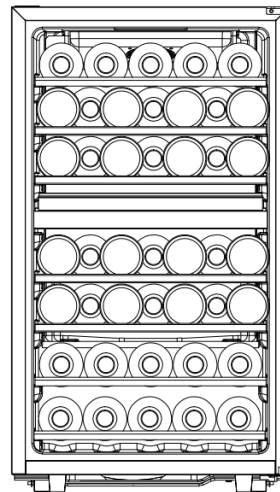 


KWR43D-2SR
43 bottles

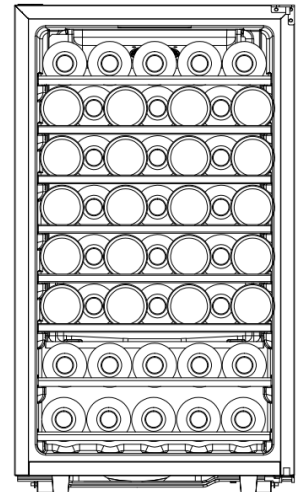 

KWR50S-1SR
50 bottles

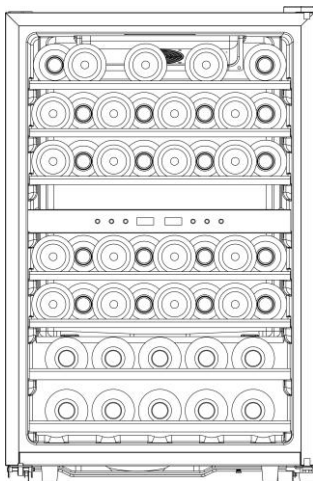 


KWR47D-2SR
47 bottles

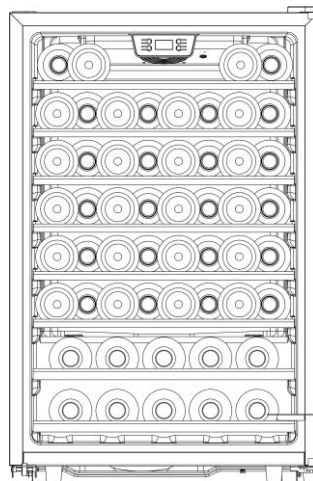 

KWR55S-1SR
55 bottles

 Bottle capacity

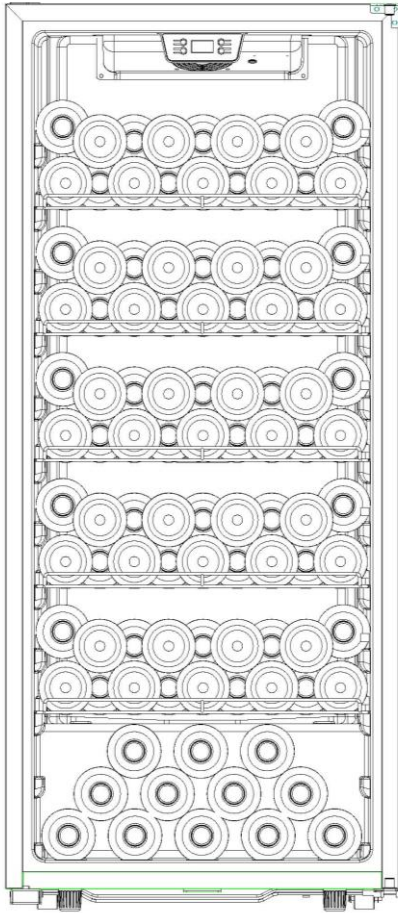

KWR102S-1SR
102 bottles

Care and Maintenance

Cleaning your wine cellar:

- Turn off the power, unplug the appliance, and remove all items.
- Wash the inside surfaces with warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the outside cabinet with warm water and mild liquid detergent. Rinse and wipe dry with a clean soft cloth.
- Dust the front grill and back of the unit twice yearly. Make sure the power is off before cleaning.
- It is recommended to clean the unit completely inside and out yearly to maximize the longevity of the product.

Moving your wine cellar:

- Remove all bottles and any other items you may have inside the unit.
- Securely tape down all loose items (shelves) inside your appliance and tape the door shut.
- Turn the adjustable leg up to the base to avoid damage.
- Be sure the appliance stays secure in the upright position during transportation.
- Protect the outside of the appliance with a blanket or similar item.

Troubleshooting

There are many common issues you may experience with your wine cellar that can be solved very easily, without the need of a service call. Try the tips below to troubleshoot your unit should you experience any problems:

| PROBLEM | POSSIBLE CAUSE |
|--|---|
| Wine cellar does not operate | Not plugged in or the appliance is turned off The circuit breaker tripped or a fuse has blown out |
| Wine cellar is not cold enough | Check the temperature control setting External environment may require a higher setting The door is opened too often The door is not closed completely The door gasket is not sealing properly |
| Wine cellar is turning on and off frequently | The room temperature is hotter than normal. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. |
| The light does not work | Not plugged in. The circuit breaker tripped or a fuse has blown. The light board has burned out. |
| Vibrations | Check to assure that the Wine cellar is on a level surface. |
| The wine cellar seems to make too much noise | A faint humming noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerator in your wine cellar. The wine cellar is not on a level surface. |
| The door will not close properly | The wine cellar is not on a level surface. The gasket is dirty. The shelves are out of position. |

SERVICE FOR YOUR WINE CHILLER:

With the purchase of your Allavino appliance, you can have the confidence that if you ever need additional information or assistance, the Allavino Customer Service team will be here for you. Whatever your questions are about our products, help is available. Just call us toll-free.

ALLAVINO PRODUCT CUSTOMER SERVICES:

Product Information, Part Orders and In-Home Repair Service: **888-980-4809**