

PLEASE READ

Smart Glycol™ Power Pack

QUICK START GUIDE

Congratulations on your purchase of a new Micro Matic glycol chiller. This glycol chiller is equipped with SMART DRAFT™, a temperature monitoring technology. The smart device can provide valuable troubleshooting information which can be used to diagnose service and maintenance issues. Follow the steps listed for a quick and easy installation of your Smart Glycol™ Power Pack.

STEPS

1. Locate the orange-wrapped walk-in cooler sensor on top of glycol chiller.

See Figure 1

2. Install walk-in cooler temperature sensor (orange-wrapped sensor) in walk-in cooler using the supplied foil tape to secure the sensor to the cooler wall.

See Figure 2

NOTE: The sensor cable is 30 feet. If the glycol chiller is located more than 30 feet from the walk-in cooler the cooler sensor cannot be used. If cooler sensor is not used **it must** be unplugged from the smart device.

See Figure 3

3. Plug smart device into an available 110 volt power supply.
4. Scan the BarTrack QR code located on the side of the glycol chiller near the serial number label, and follow the on-screen instructions to complete the registration of your Smart™ Power Pack.

See Figure 4



Figure 1



Figure 2

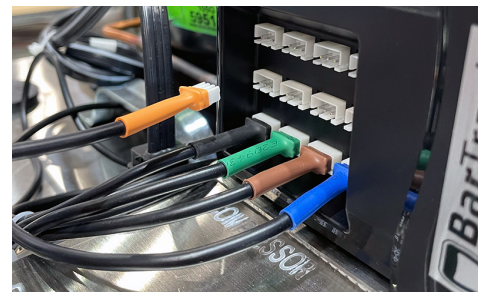


Figure 3



Figure 4



FOR CUSTOMER SUPPORT, CONTACT US:

Toll-free: 866-327-4159

By email: insidesales@micro-matic.com