

Wine Master Cellars, LLLP • 10645 E 47th Ave, Denver, CO 80239 • phone: 866.650.1500 • fax: 866.650.1501 • vintageview.com

WS-BIG1 Installation Instructions

| Required tools: | Phillips Head Screw Driver | Included Parts: | 1 Base Strip | 6 Spiral Drywall Anchors |
|-----------------|--|-----------------|----------------------|--------------------------|
| | Level | | 1 Neck Strip | 8 Screws |
| | Pencil | | 8 Mounting Hole Caps | 2 Toggle Bolts |
| | Tape Measure | | 2 Plastic Couplers | |
| | Drill and 1/2 inch (12.7 mm) drill bit | | | |

Fasteners:


There are four pre-drilled mounting holes in each strip, eight total per rack. Appropriate fasteners for your wall surface must be utilized in every mounting hole for proper installation. Fasteners for drywall or wood wall surfaces are included with your rack. We recommend the following fasteners for these surfaces:

- Attaching to drywall, use 6 of the included Spiral Drywall Anchors and 6 Screws along with 2 Toggle Bolts
- Wood wall surfaces can use the 8 included Screws
- Concrete, Brick or Stucco: 3/16" x 1 ¼" masonry screws or #8 x 1 ¼" screws with appropriate size expanding concrete anchors
- VintageView® Floor to Ceiling Frame (FCF-HD): Each FCF-HD comes with self-drilling screws to attach WS series racks to the frames

Before you begin, choose the direction the bottle necks should point




If the bottle necks are to point to the right, the base strip must be installed to the left of the neck strip.




2. Mark the hole locations for the strip - Hold either the neck

1. Lay out the wall - Starting at least 3-1/2 inches (88.9 mm) from adjacent walls or other obstructions, mark the centerline of the first strip. From there, measure the overall length of a bottle that will be stored on the rack and subtract 6 inches (152 mm) as a guideline. Typically, the measurement is between 10 and 14 inches (254 - 356 mm). Use that distance as the centerline between the neck and base strip and mark the location (Figure A).

Optional: If installing multiple columns, mark the centerline for the next strip at least 7 inches (178 mm) from the second mark and mark again 10 to 14 inches (254 - 356 mm) from that mark for the distance between the neck and the base strips of the second column. To lay out additional columns, mark the wall, alternating between the two measurements.

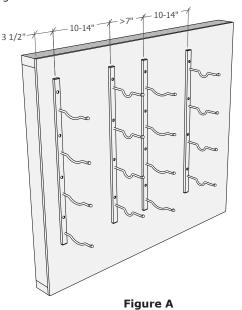


or base strip of the rack in place against the wall, centered on the first mark the appropriate distance above the floor. Ensure that the rack is vertical using a level and mark the 4 hole locations with a pencil (Figure B) then set the strip aside.

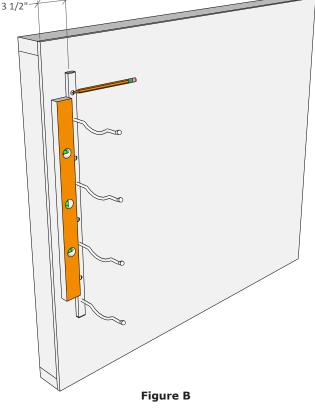

3. **Install the Anchors** - For the lower 3 holes only, use a Phillips head screw driver to screw the Spiral Drywall Anchors into the wall at the marked hole locations until the head of the anchor is flush with the wall surface (Figure C). For the TOP mounting point, drill a 1/2 inch (12.7 mm) hole for a Toggle Bolt (Figure D).

Note: If a strip location is over a stud, the Toggle Bolt and Drywall Anchors should not be used. Extra Screws are supplied and can be used to directly fasten that strip into the stud.

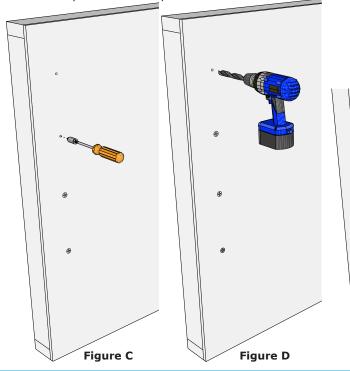


5. **Hang the second strip** - Repeat steps 2 through 4 with the second strip, centering it horizontally with the second mark on your wall and adjusting the vertical position to ensure that bottles placed on the rack will have a very slight neck down tilt (Figure G). In many instances the tops of the racks will be close to even/level.

Figure G Figure G Figure G Figure G Figure H


4. **Hang the first strip** - Take a Toggle Bolt and remove the expanding nut. Insert the bolt through the top mounting hole of either the base or neck strip, as it corresponds with the bottle direction chosen earlier. With the wings of the nut oriented to fold toward the head of the bolt, thread the expanding nut onto the bolt so the tip of the bolt starts to protrude from the end of the nut. Hold the strip so the Toggle Bolt aligns with the 1/2 inch hole and gently push the expanding nut through the wall (Figure E). Ensure that the wings of the expanding nut have fully expanded on the back side of the wall and gently tighten the bolt, verfiying that the bottom 3 mounting holes align with the anchors in the wall. Secure the rest of the strip in place through the bottom mounting holes with the provided Screws (Figure F) and fully tighten the Toggle Bolt.

Note: For ease of removal when stacking racks, it is recommended that the end plugs are taken out prior to installation.

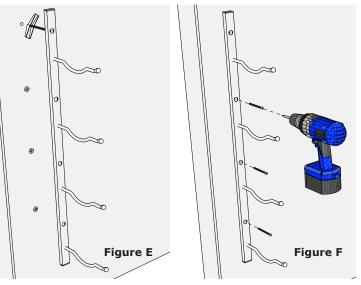

6. **Finish up** - Install the mounting hole caps in the 1/2 inch holes on the face of the rack by pressing into place (Figure H).

Stacking racks - VintageView WS series racks are designed to stack, one on top of the other. You may remove the preinstalled plastic end plugs from the appropriate rack ends and use the supplied couplers to align the two racks when stacking (Figure I).

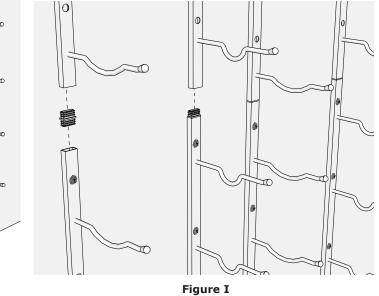

For product warranty information, please visit: <u>www.VintageView.com/support/warranty</u> We're here to help, call us at 866-650-1500 with any questions.